



## How to connect with Video guard through Web integration

Go to the NVR/DVR Local menu –Setting – Network setting – Advanced – Alarm receiver settings . ( This menu accesible by Local menu only by connecting Monitor )

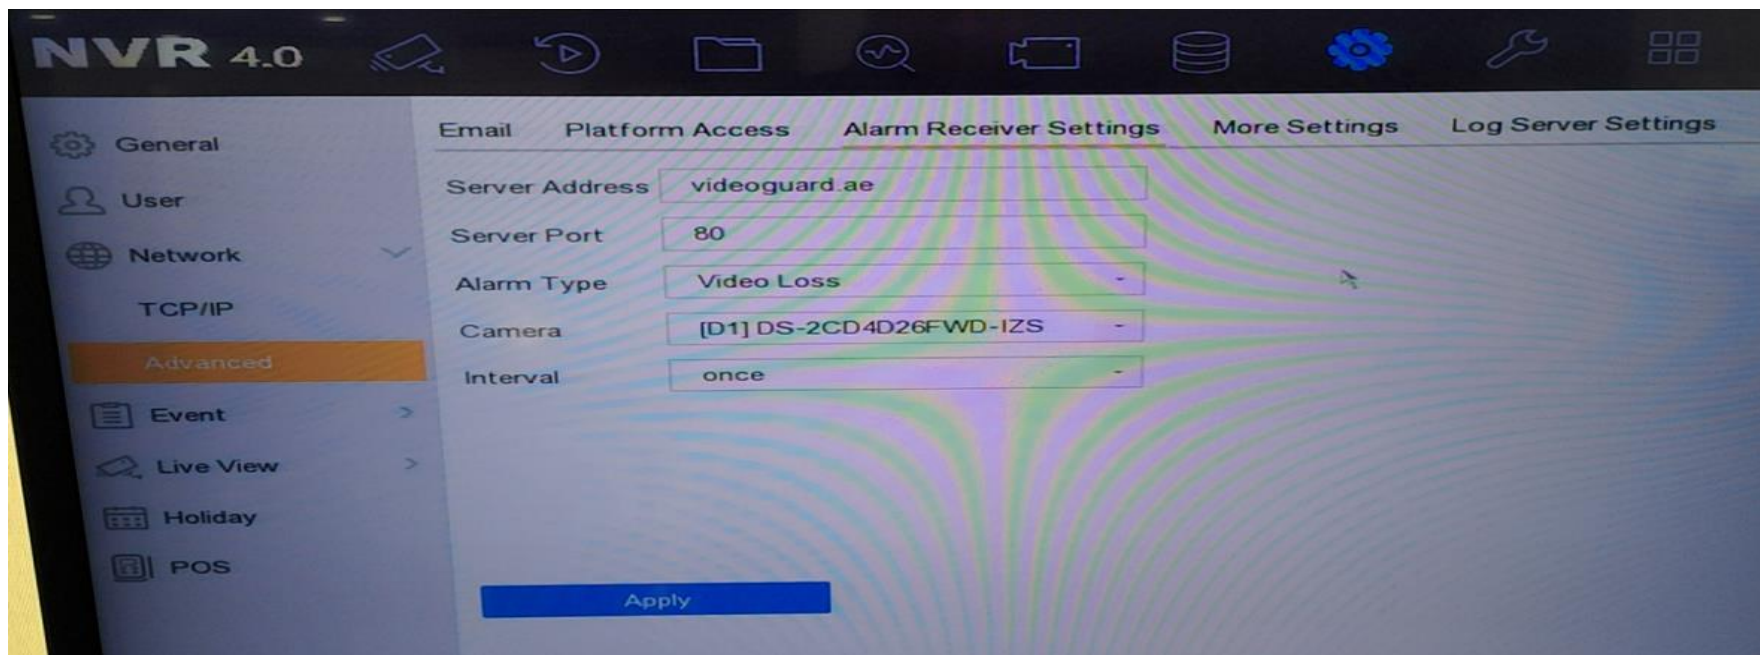

Fill the web URL address or IP address details and Port and Select the alarm type and interval as per Video guard.

Only add the address or IP : <http://<ServerIP>:<ServerPort>/VGAlarmReceiver/Receiver.svc> (No need to add Blue color part in NVR)

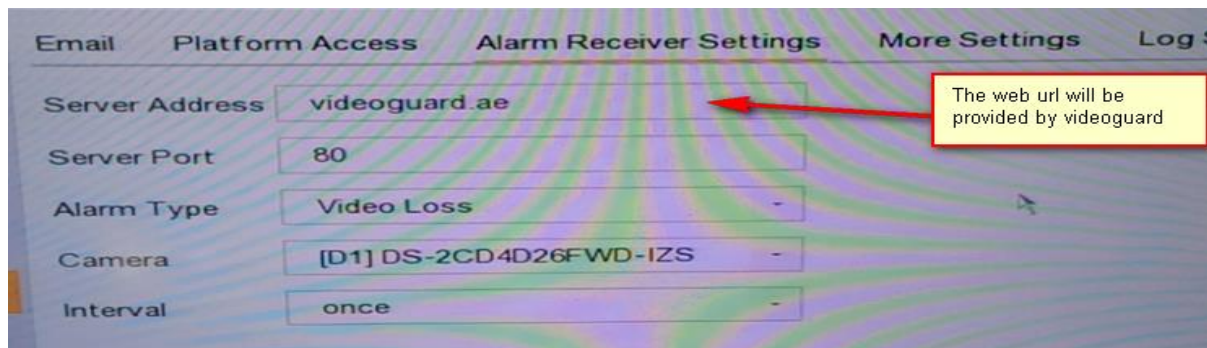

Alarm Host IP and port can add in [More settings](#) or in the Web browser, IP and port details will provide by Video Guard.

Alarm Host IP	<input type="text"/>
Alarm Host Port	<input type="text" value="0"/>

e.g.

## Set Following Setting in your recorder

- Alarm Center IP : 192.168.14.30 Port : 2020
- NTP IP : 192.168.14.30 Port : 123 ( Time Interval : 2 Sec.)
- RTSP Port : 554 ( Must be set this value)
- TCP Port :  ( as per Manufacture Default)
- HTTP Port :  ( as per Manufacture Default)
- User Name : \*\*\*\* Password : \*\*\*\*\* ( Minimum 6 Char) with **Admin Full Rights**

NTP will sync auto if connect to VG sucessfully or add Manually

If default port changed add the correct Port for HTTP , RTSP , Server (SDK )